



Using the back plate as a guide, cut a hole in the fuselage side to accommodate the charge socket. Push the charge socket through the fuselage side and secure the back plate using the two screws. Push the charge plug from the switch into the rear of the charge socket holding the socket firmly.

To remove the charge socket for use in a different model, carefully spread the two retaining lugs on the back of the charge socket and use the charging lead to push the charge plug out through the rear of the unit.